

Functional Specifications

Touch Points (7)	capacitive touch detection
Click Feedback	Yes
Backlight	Yes
Display	time, alarm time, temperature
Alarm clock function	adjustable on the device; built-in alarm signal or playback via Audioserver
Lighting	RGBW illumination through back of device as night light

Ambient Conditions

Temperature	-40 ... 35 °C / -40 ... 91 °F
Humidity	max. 95 % r.H. (non-condensing)
Ingress Protection	IP20

Information

Contains **FCC ID: 2ARRV-000376**

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



For more information
about this product, visit
loxone.com/help/touch-nightlight-air

V110825

**Loxone
Electronics GmbH**
Smart Home 1
4154 Kollerschlag
Austria

Loxone UK
The Forum
Station Road
Theale, RG7 4RA
United Kingdom



For additional information,
declaration of conformity, visit
www.loxone.com/datasheets

Need Help?
loxone.com/support



Touch Nightlight Air

Part No.: 100804 (White)
Part No.: 100805 (Gold)

LOXONE

About the product

The Touch Nightlight Air features the Loxone Standard T5 touch points to control your lighting, blinds, music, etc. It displays the current time and allows you to set an alarm. There is an integrated RGBW light which you can use as a night light or have it gently wake you leading up to your alarm going off. Use the additional input to arm your burglar alarm, for example.

Features

- 5 control touch points & 2 function touch points
- Signal LED (freely assignable)
- Visual display for clock and temperature
- Integrated alarm
- Built-in RGBW light

Electrical Specifications

Supply Voltage	5 VDC via Micro USB Power supply
Power Consumption	typ. < 0.150 W, max. 5 W
Power Loss	max. 5 W

Interfaces

Loxone Air	868 MHz (SRD Band Europe), 4 channels, max. 15.1 mW e.r.p. 915 MHz (ISM Band Region 2), 10 channels, max. 13.2 mW internal antenna
------------	--

Installation

Connect the device only to the power supply provided with the product.


- If the device is not in pairing mode: Reconnect the Micro USB, then press and hold T7 (lower middle) for 5 s within 10 s of powering on.
- T7, short press: Scroll through stored alarms.
- T7, press and hold for 3 s: Display flashes → adjust time of selected alarm or create a new one if none exists.
- Adjust time: Use left/right corner touch points to set hours and minutes.
- Confirm: Short press T7 (display blinks if active).

Follow the warnings to prevent fire or explosion.

- Do not expose the device to physical impact or damage.
- Use only manufacturer-approved chargers, accessories and power supplies.
- Prevent the jacks from coming into contact with conductive elements, such as metal or liquids.
- If any part of the device is cracked or broken, stop using the device immediately and get in contact with Loxone.
- To prevent damage avoid direct sunlight.
- Indoor-use only

Follow the warnings to avoid injury or device damage.

- Keep out of reach of children and animals.
- Take note of the ambient and storage temperatures. Using or storing the device outside the recommended temperature ranges may damage the device.
- Do not use the device in a hot environment or near fire.

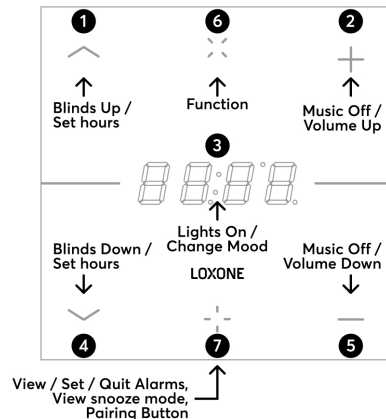

Safety Instructions

Read all safety information before using the device to ensure safe and proper use. This device is free of maintenance and must only be cleaned with a dry cloth.

