



ASSEMBLY INSTRUCTIONS

Install Sub 10 Master & Client Custom Enclosure - Frontfire

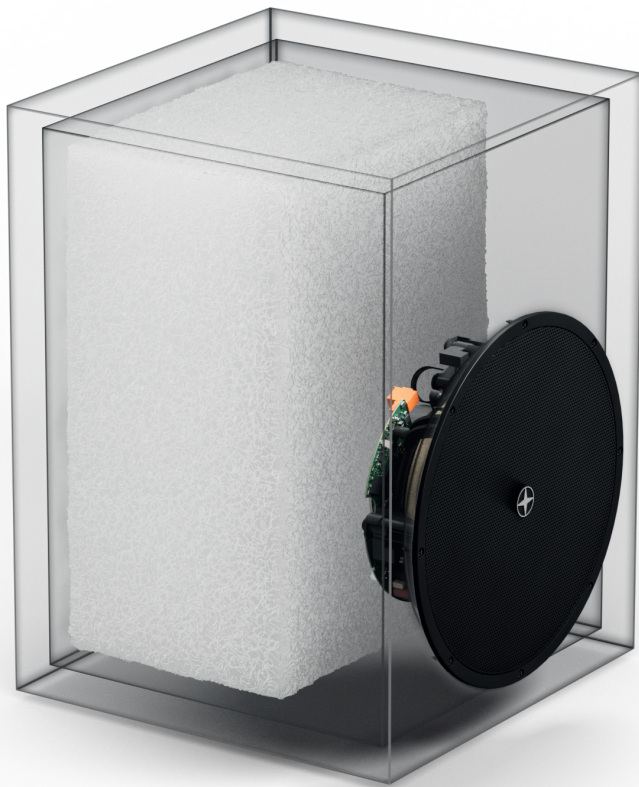


FRONTFIRE

- ▶ Net Volume: 30 L to max. 60 L
- ▶ Airtight Enclosure
- ▶ Minimum 16 mm panel material (MDF, plywood, chipboard)
- ▶ Insulation material: Polyester wadding (500 g/m²), minimum 5 cm clearance from electronics
- ▶ Cable entry including strain relief (airtight)
- ▶ Cutout size: Ø 258 mm / 10.2"
- ▶ Use suitable adhesive feet (rubber, felt) for decoupling and protecting the enclosure
- ▶ Placement: The Install Sub 10 may be positioned against a wall or corner during operation; maintain a minimum distance of 5 cm

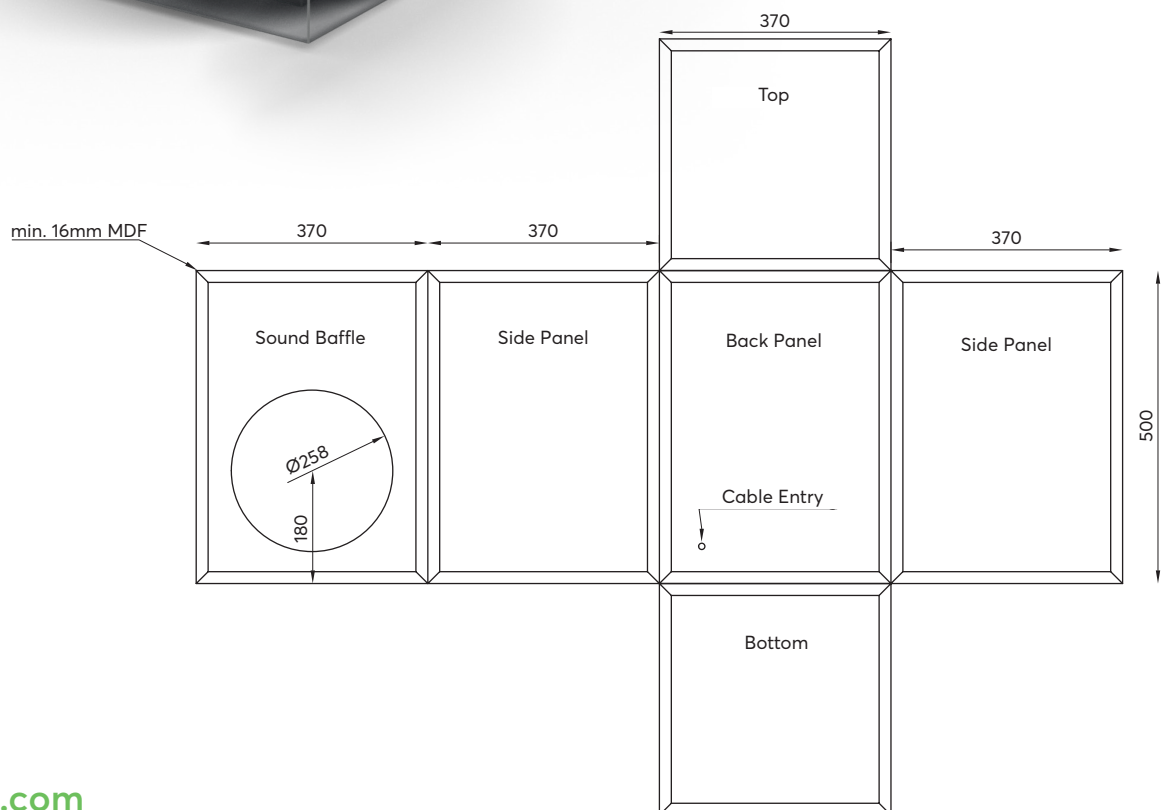

BAUANLEITUNG

Install Sub 10 Master & Client Individuelles Gehäuse - Frontfire

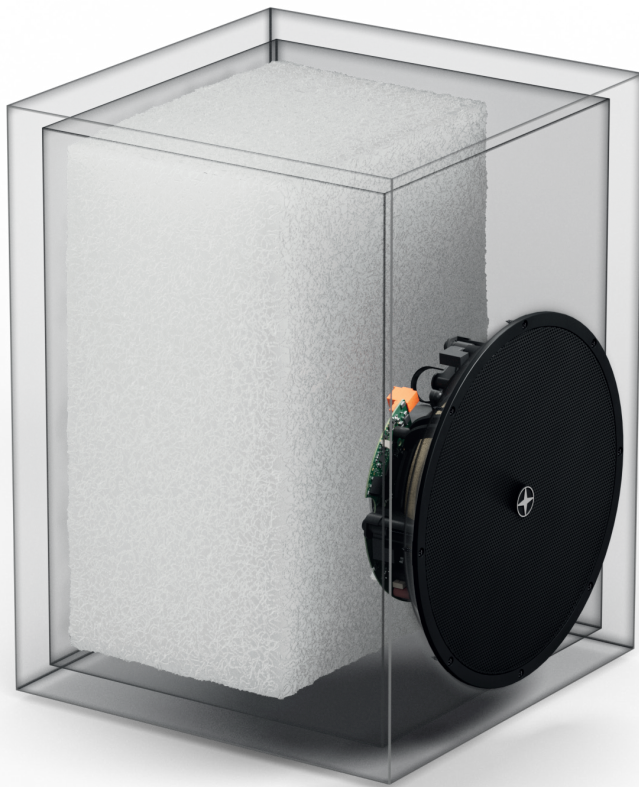

FRONTFIRE

- Nettovolumen: 30 l bis max. 60 l
- Luftdichtes Gehäuse
- Mindestens 16 mm Plattenmaterial (MDF, Multiplex, Spanplatte)
- Dämmmaterial: Polyesterwatte (500 g/m²), mind. 5 cm Abstand zur Elektronik
- Kabeleinführung inkl. Zugentlastung (luftdicht ausgeführt)
- Ausschnittgröße: Ø 258 mm / 10,2"
- Zur Entkopplung und zum Schutz des Gehäuses geeignete Klebefüße verwenden (Gummi, Filz)
- Aufstellung: Der Install Sub 10 darf im Betrieb zur Wand bzw. Ecke ausgerichtet werden; mind. 5 cm Abstand einhalten

